



4. Main Body (Main Body, installation on the inside of the door)

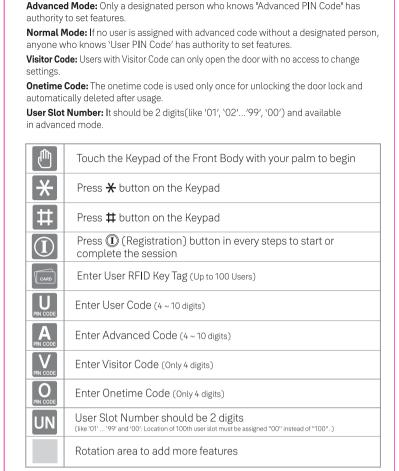


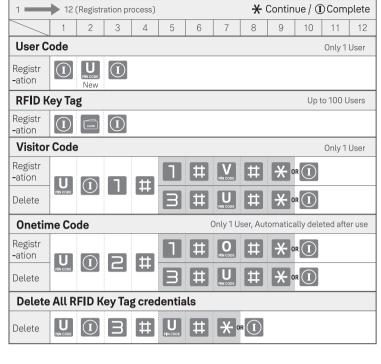

Normal mode is for convenient mode for anyone with user code to change various settings.



10. Unlocking Door with Code

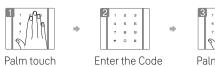







11. Unlocking Door with RFID Key Tag



RFID Key Tag.

12. Opening Door(Inside/Outside)




Press the lever handle down to open door

From Inside



Press the lever handle down and open the door.

2. Basic Contents

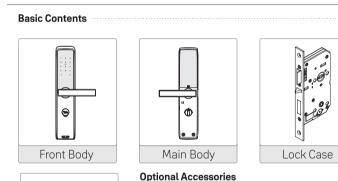

• User Manual

- Installation Guide • RFID Key Tags X 4
- Module • Mechanical Keys ·Bluetooth Module ·Screws • AA Batteries X 4

3. Specifications

Parts	Specifications	Remarks	
Front Body	72(W) X 344(H) X 30(D)	mm Operating temperature	
Main Body	72(W) X 344(H) X 36(D)	mm -15~55°C (5~131°F)	
Lever	Zinc die-casting	Zinc die-casting	
Card Keys	4 EA	Up to 100 keys	
Works for	4EA 1.5V AA Alkaline bat (Operating voltage: 4.5~(
Lock Case	Steel and SUS304	Steel and SUS304	
Option Remote Co	ontrol Wireless	Optional	

· Remote Controller

• Remote Control

** Battery life may vary depending on temperature, moisture levels, frequency of use and the quality of battery used. * Please make sure that all parts are included when purchasing the product.

* Optional products may not be abailable depending on you country or local dealer.

5. Front Body

1 Keypad(10-key)	
2	RFID Key Tag reader
3	Dead Bolt Jam Lamp
4	Lever
6	Low Battery Indicator
6	Emergency Cover
7	Emergency Mechanical Key Slot
8	Emergency Power Supply Terminal

6. Main Body

0	Battery Cover
2	Registration button
3	Lever
4	Manual Thumb Turn
5	1.5V AA Alkaline Batteries (4PCS)
6	Module Accessory Slot (Optional)
7	Volume Control Switch
8	Auto/Manual Lock Button

8. Product Features

7. Setting Menu

Yale Home App Yale Home gives you the peace of mind of knowing who and what you love is safe - no matter where you are-just at the touch of your smartphone.

Smart Touchpad - Auto Lock ·

The door locks when you touch the palm on the keypad.

3 minute Lock Out Feature -After five (5) unsuccessful attempts of an invalid code or RFID key tag, lock out mode is

activated for 3 minutes. Smart Etiquette

When entering a pin code on the keypad, the user can open the door lock in silent mode.

Security enhancement to enter any number before or after entering a password to prevent the PIN code from being exposed.

External Forced Lock

It is a security-enhancing function that an alarm goes off if someone opens door from inside when setting up functions outside.

Other features and Benefits • Remote Controller (Optional):

- This option may not be available depending on your country or local dealer.
- Network Module/Controller (Optional): It allows door lock to connect with Home network controller.
- Intrusion/Broken Alarm.
- Low Battery Alarm and Emergency Power Supply.

Remote Contoller Up to 5 Users T # SET # X OR I U (I) (B) (# 3 # U # * or 1

Home Network Controller



Remote Controller

Set with registration button located on the top of remote controller. You can press it using a pin like the one shown in the image.

13. Unlocking Door with Smart Etiquette



for 3sec.





then touch the keypad

with your palm



RFID Key Tag

14. Locking the Door(Inside/Outside)

Automatic Lock Mode(Inside/Outside)



In automatic lock mode, the lock automatically locked within 5 seconds after closing the door and detecting the automatic lock sensor.

Manual Lock Mode



The door locks when touching the keypad with the palm. (outside)



Use Thumb turn knob on the main body. (Inside)

15. Automatic/Manual Lock


Enable Automatic Lock

Release the button to set automatic lock mode on the main-body (after opening the battery cover)


Enable Manual Lock




Press the button to set manual lock mode on the main-body.

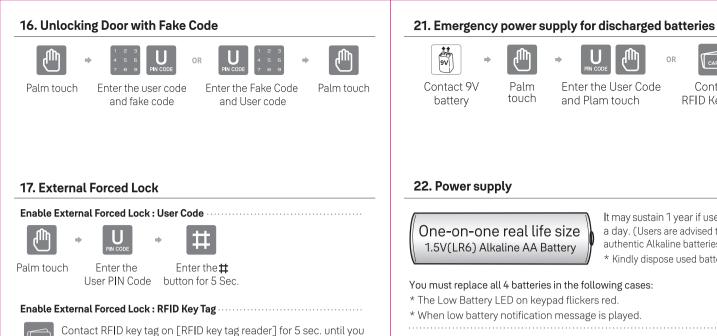




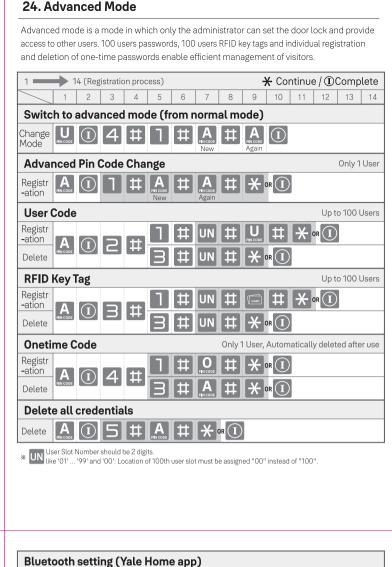

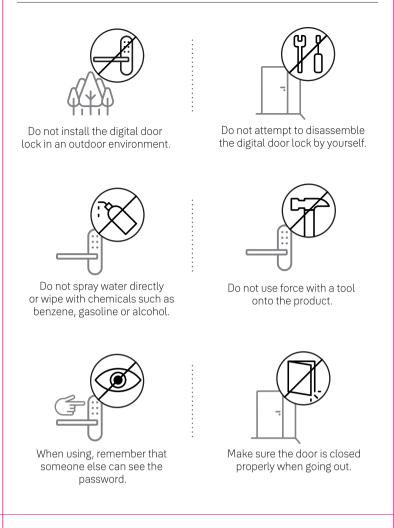



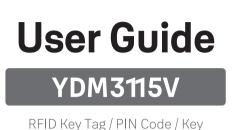

Part of ASSA ABLOY

18. Volume The operation sound volume will be adjusted according to the Volume Switch setting 19. 3 Minute Lock Out

When the door is unlocked from outside based upon proper authentication, the External forced lock will be released.

All access mode from the external side are disabled for 3 minutes to deter unauthorized access

Disable 3-minute Lock Out Open with inside door bar.

hear 3 beeps.

Disable External Forced Lock

- · Open the door with mechanical key.
- Press (I) button.

20. Alarm

Intrusion Alarm: The alarm goes off when someone forces the door open. For example, In case of an intrusion by opening a gap in the door while the door is locked.

Broken Alarm(Breakage Alarm): The alarm goes off when the front part is completely separated from the main set. For example, forced removal of external product (front body).


Turn off alarm -

- Enter the registered User code.
- Press (I) button for 5 seconds.
- Touch the registered RFID Key Tag.

23. Code Chart Duplicate if necessary

PROGRAM.

PIN Code Management(Up to 100 Users.)					
User Type	User Name	PIN Code			
Advanced					
User					

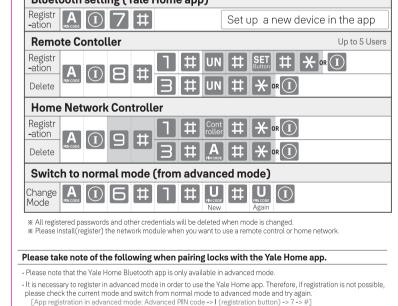

- For your information, when you change the mode to register the app, all existing registered credentials will be deleted.

26. Safety and Warning

25. Important notes

- · Do not install the digital door lock in an outdoor environment.
- Do not attempt to disassemble the digital door lock by your self. By doing so, you may get an electronic shock and damage the product.
- · Do not use force with a tool onto the product.
- · Make sure to lock the door tight when you go out.
- · Be careful not to hit the handle as it may cause injuries.
- · Do not use water and any type of solvent to clean the product such as gasoline or benzene as they can cause damage to electronic circuit, deterioration and or paint peel-off.
- · It is recommended to change User Code on a regular basis.
- · In manual lock mode, make sure to double check whether the door is securely locked.
- · When External Forced lock is set and unlock the door, the alarm will be
- Do not use rechargeable batteries. Only alkaline batteries are recommended.
- · Make sure to follow the above instructions to avoid any injuries.
- · It cannot be guaranteed in a special conditions & environment such as water condensation, seaside.
- · Warranty will not cover- exposure to dampness, excessive heat, excessive humidity and other extreme environmental conditions, corrosion, damage beyond repair, rusting, unauthorised modifications. unauthorised repairs, neglect, accident, alteration, acts of God, spillage of liquid or food particles.

PLEASE READ INSTRUCTIONS BEFORE USE. The functions and design of this product can be changed without prior notice for performance and quality improvement.

ISL-1857-00-057